Icom ID-31 and ID-51 Out of the Box Programming Instructions

Initial Setup

Enabling the Internal GPS

For the Nearest Repeater function to work, the internal GPS must be enabled.



Select D-pad



(**Down**/DR) until

you get to **GPS** Then press [•] (Enter) Select **GPS Set** [•] (Enter) Select **GPS Select** [•] (Enter) Select **Internal GPS** [•] (Enter)

Select 📖 (Menu) to return to the main screen

It may take a few minutes to acquire a valid signal. You should locate the radio so that it has a clear view of the sky. While we are waiting, let's set your call sign.



Check GPS position?

If the GPS is enabled, the GPS icon will be turned on. It's quick and easy to see if you have an acquired signal.



or

Select (Quick) Select GPS Information (Enter) Select (Quick) to return to main screen

Selecting Nearby Repeaters

The ID-31 and ID-51 both have a database of repeaters and their locations. With the integrated GPS, the radios are now able to find the closest repeaters to you.

Press and Hold the (Down/DR) for 2 sec. The radio display should look similar to this

(***	DV-G 🛛 🖉 🖿 17:28
то	Use Reflector cacaca
FROM	Buford 440.725 KJ4BDF B

On this screen, the left hand side is highlighted in black to denote which field that you are changing, the TO or FROM field. The display above indicates that we are changing the FROM field.



Then listen before you talk!

Provided by <u>www.DSTARInfo.com</u> February 2013